

開啟螢幕步驟

Turning on the Screen



1. 拉開左右兩側白板

Slide open the whiteboards
on both sides.




2. 按下螢幕開機鈕，即可開機

Press the screen power button to power it on.



投放電腦/筆電畫面步驟

Turning on the Projection Screen

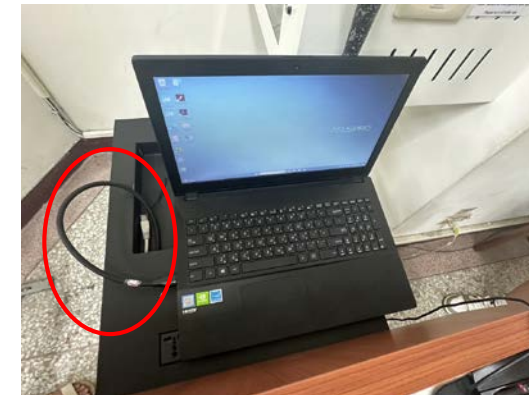

*筆電要接上桌機旁的HDMI線

1. 拉開資訊講桌抽屜將內置電腦主機**開機**
(系統電源**開**→內置電腦**開**)

Pull out the lectern drawer and **turn on** the built-in computer

(System Power **ON** → Built-in Computer **ON**)

2. 選擇要投放螢幕的訊號 (**桌機或筆電**)

Select the signal source to project (**Desktop or Laptop**)



筆電畫面 Laptop screen




桌機畫面 PC screen

3. 螢幕出現投放畫面

The casting screen will appear.

無法顯示投放訊號源之作法

Steps to take if the projection signal source is not showing

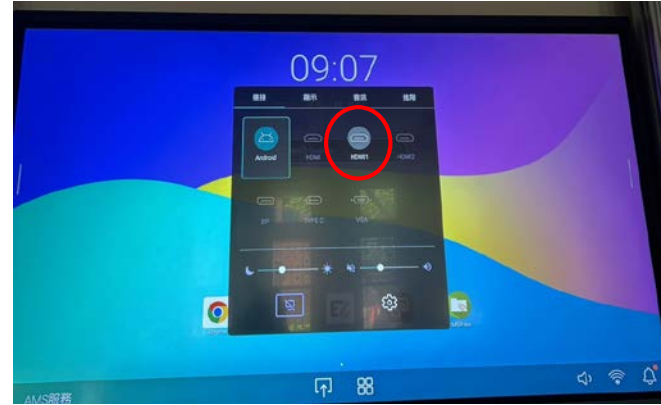

1. 按方框箭頭選HDMI 1

Select HDMI 1 by pressing the box with the arrow.



2. 即可出現正確畫面

The correct screen will then appear

使用電子白板步驟

Using the Electronic Whiteboard




點選螢幕上EZWrite 程式

Tap the EZWrite application on the screen.

電子白板繪製

Creating Images on the Electronic Whiteboard

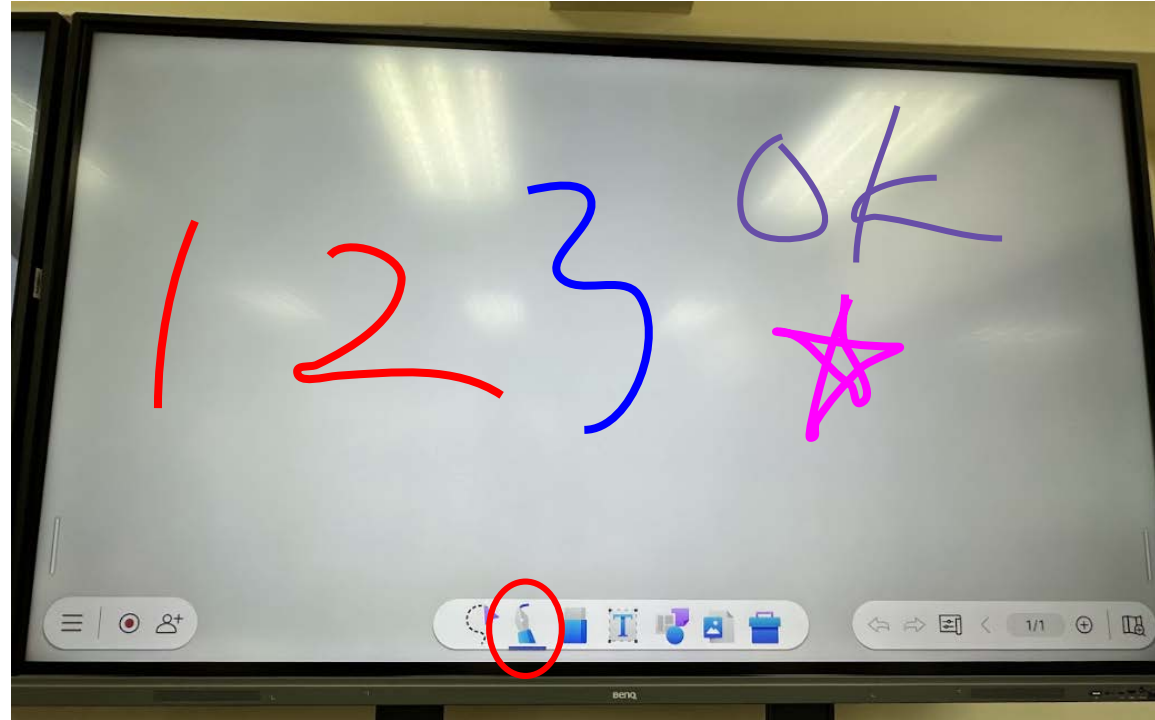

用觸控筆或手指，點選工具選項內的"畫筆"後即可開始繪製檔案

Using a stylus or finger, tap the **Paintbrush** located in the Tool Selection Panel to begin creating images



匯出檔案僅限於使用**螢幕自身**電子白板程式(EZWrite)

Files can be exported only through the **screen's built-in** EZWrite application




1. 將USB插入螢幕下方插槽處

Insert the USB device into a USB port


匯出檔案至USB (一)

Exporting Files to USB (1)

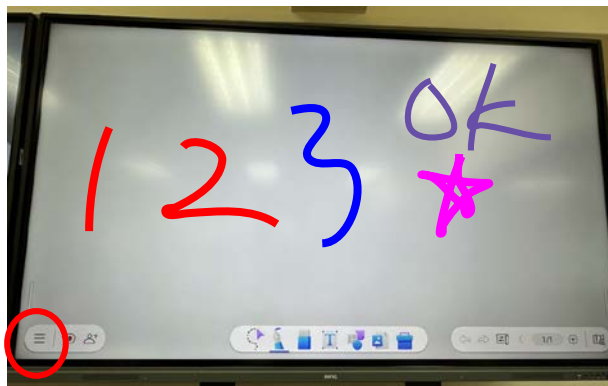

2. 先按左下角的"**三條橫線**"

Click on the **three lines** in the lower left corner

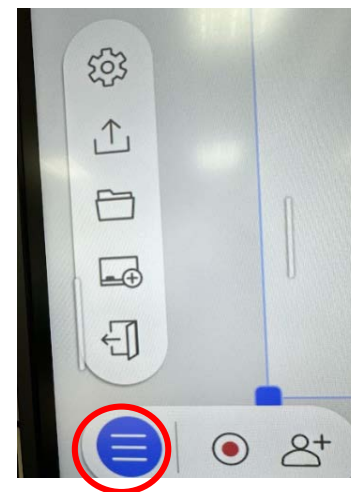

3. 再按"**匯出**"鍵

Click on **Export**




4. 選擇要匯出的檔案類型

Select the File Type to export

建議**多存一個EZWrite檔**

*以備下次使用

It is recommended that you **save one extra copy of the EZWrite file** for future use

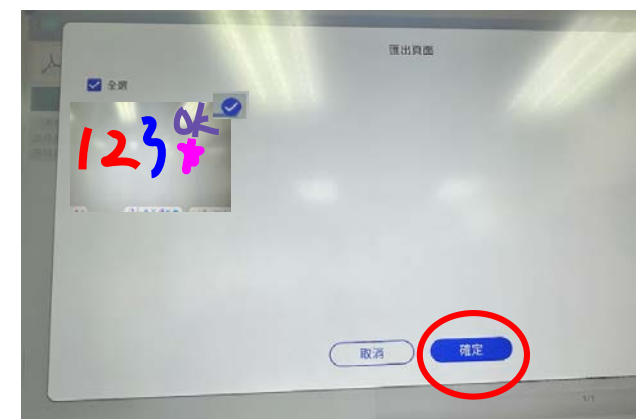


5. 選擇要存的畫面後按**確定**


Select the image to be saved, and click **Confirm**

匯出檔案至USB (二)

Exporting Files to USB (2)

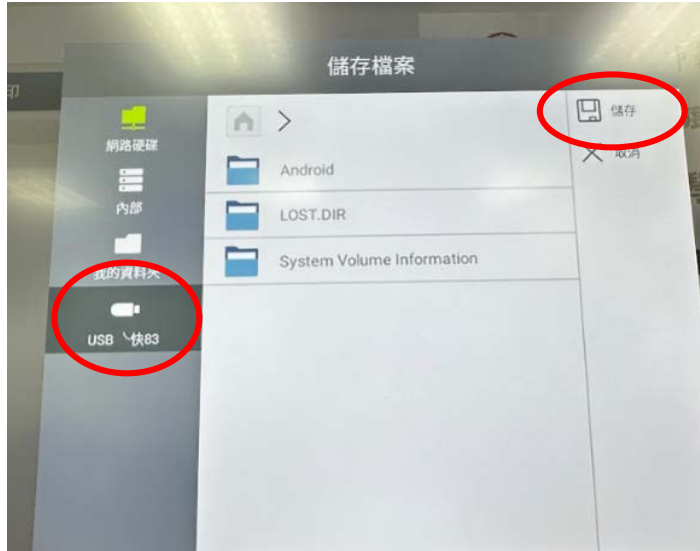


6. 點選**USB**後，再按**儲存**即可
Click on **USB** and then **Save**

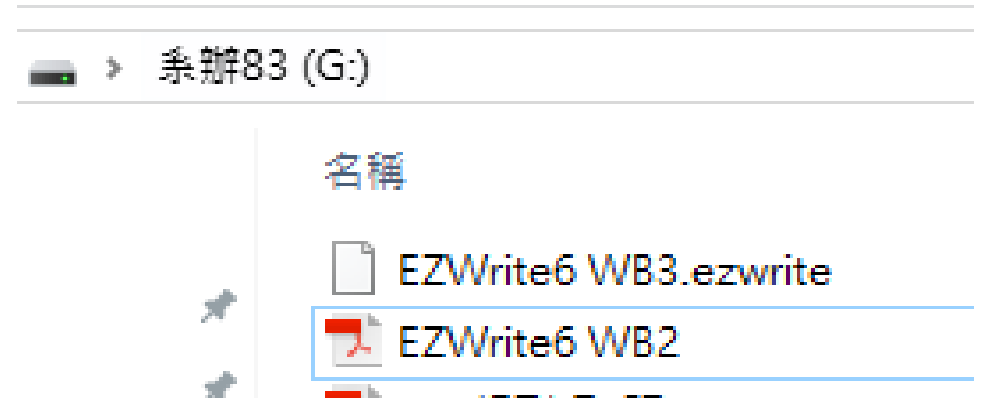

7. USB內已有剛匯出的檔案
The exported file is now saved to the USB drive

切換回首頁畫面

Switching back to home screen

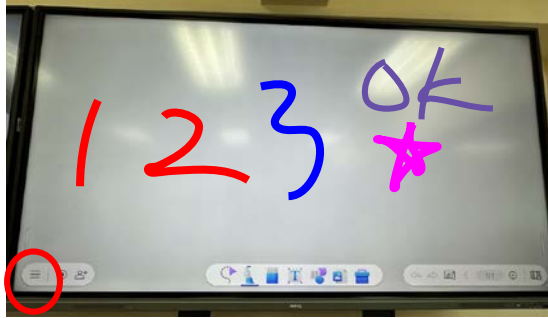

1. 先按左下角的"三條橫線"

Click on the **three lines** in the lower left corner



2. 再按"離開"鍵

Click on **Exit**



3. 即可回到首頁畫面

The home screen will appear



如需使用左側照片中之物品請至系圖借用

Items in the photo on the left are available for borrowing at the department library.